




Wooden Curtain Pole

Preparation and Fixing Instructions

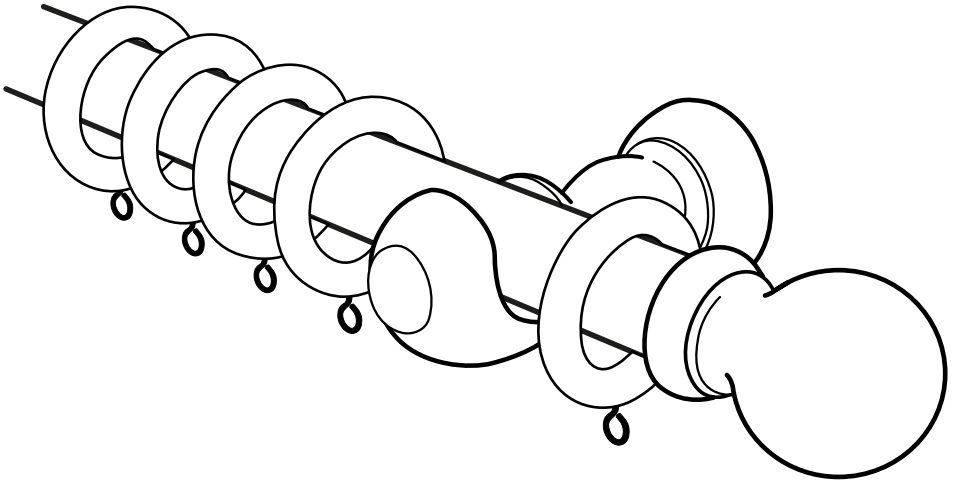

Tools required for installation:

To adjust rail length:

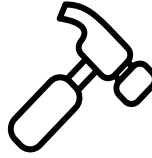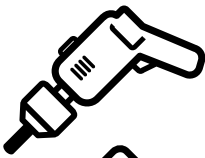

Wooden Curtain Pole Preparation and Fixing Instructions

- 1 Unpack your curtain pole package carefully and lay out the contents consisting of:
 - **Curtain Pole and 2 End Finials**
 - **Curtain Rings to suit** (1 per 10cms of pole)
 - **2 or 3 Brackets** (according to pole size)
 - **Fixing Screws, Wall Plugs & Grub Screws**
- 2 Mark fixing positions for brackets ensuring that they are level (see Fig 1).
- 3 Fix bracket plates to wall ensuring that the brackets are aligned evenly. Screw brackets onto fixing plate (see Fig 2).
- 4 Cut pole to size, allowing for finials to be fitted at each end. Where poles are supplied in two parts they are joined by screwing the two halves together with the double ended screw provided. If you need to shorten the overall length of the pole ensure that an equal amount is trimmed from each half, and that it is taken from the outer ends, so that the centre screw still functions. The centre support should be positioned to cover the join.
- 5 Slide the rings onto the pole and then push or screw on the finials, ensuring that at least one ring is positioned between the bracket and finial at each end.
- 6 Position the pole centrally into the brackets and secure with small screw provided (see Fig 3).
- 7 Where centre bracket is provided, please ensure that the ring nearest the centre of each curtain is placed at least 5cm in from that edge (see Fig 4) to allow the curtains to overlap.
- 8 The pole is now ready for curtains to be hung.

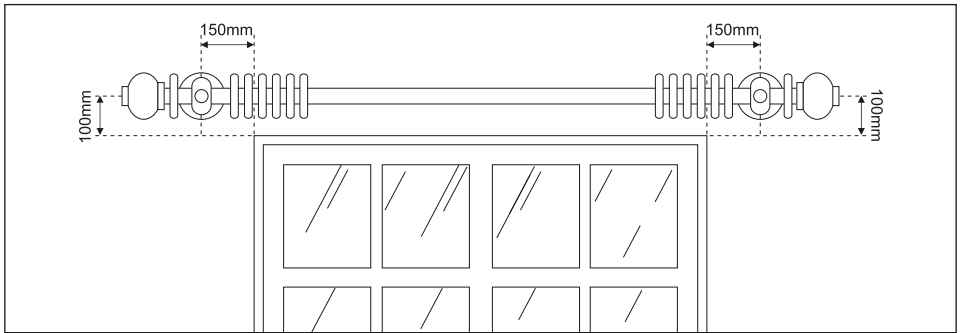


Fig. 1

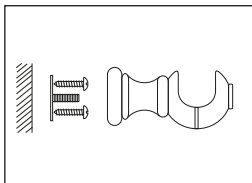


Fig. 2

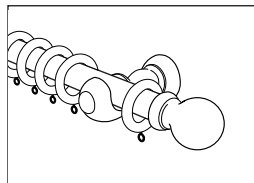


Fig. 3

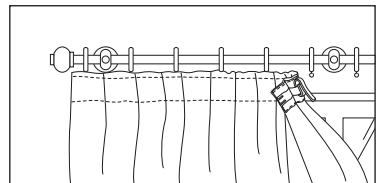


Fig. 4